



1 – LINK – connect to (1) Standard TelINF slave unit (straight through)


2 – Power 12DC center positive


3 – Signal OUT – TRRS jack
Binary outputs:

A) Jack OUT – (standard) switch closure indicating headset is inserted

B) VOX Relay OUT – (option) form A NO relay - closed when audio presented to headset.

4 – USB – Mini C USB 2.0 to host processor

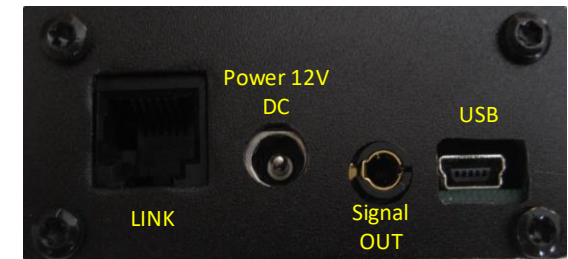
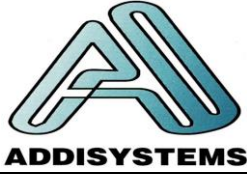
| | | | | |
|---|-----------------------------------|---------|--------|-------------|
|  | TelINF USB Rear Panel Connections | | | |
| | TelINF / USB / | | | |
| | SIZE | FSCM NO | DWG NO | REV |
| 2020/6/25 | SCALE | 1:1 | SHEET | 2 1 OF 1 |