


White (VOX)
Green (Jacked in)
Red (VOX)
Black (Jacked in)



183mm cable P/N TelINF/TRRSMC6

S R2 R1 T

Black
Green
White
Red

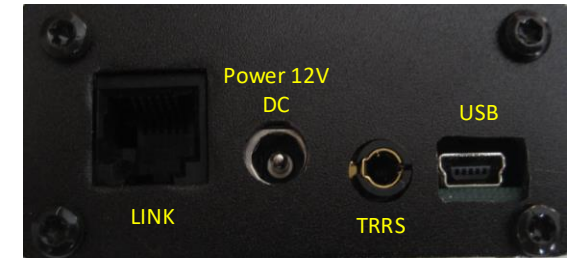

TRRS PINOUT


VOX - form A normally open relay - closed when audio detected

Jack Sense- switch closure indicating headset is inserted

SEE FEATURE NOTES

MCC FEATURE NOTES:

FEED THROUGH	Link pins 1,2 and 7,8 are connected to TRRS pins S,R2 and R1,T respectively.
ISOLATED	Link pins 1,2 and 7,8 are connected independent Form A relays and TRRS pins T,R1 and R2,S are connected independent Form A relays.
All contacts rated for 12VDC @ 1A	

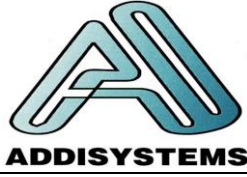	TRRS Application Notes			
	TelINF / USB / TRRS			
	SIZE	FSCM NO	DWG NO	REV
2020/1/25	SCALE	1:1	SHEET	1 OF 1